

KHADAS

Mind xPlay

Portable Display

사용 설명서

xPlay에 대해 자세히 알아보세요.


Mind xPlay(이하 "xPlay")는 이동 중에도 필요한 모든 기능을 갖춘 가볍고 휴대성이 뛰어난 디스플레이입니다. 내장 배터리, 마이크, 카메라, 스피커, 높이 조절 스탠드를 통해 언제 어디서든 모바일 작업, 화상 통화 등을 할 수 있습니다.

Mind Link를 사용하여 Mind 시리즈 컴퓨터를 연결하고 xPlay Keyboard[1]와 페어링하면 부드러운 타이핑과 터치 컨트롤을 경험할 수 있습니다. Mind를 xPlay 뒷면에 장착하기만 하면 몇 초 만에 바로 작업에 복귀할 수 있습니다.

Mind와의 원활한 협업 외에도 xPlay는 USB-C 확장을 지원하며 노트북, 데스크톱, 스마트폰과 호환되어 메인 화면 또는 생산성 향상을 위한 보조 화면으로 활용할 수 있습니다.

[1] xPlay 키보드는 일부 번들 상품에 포함되어 있거나 별도로 판매됩니다.

버튼 및 단자

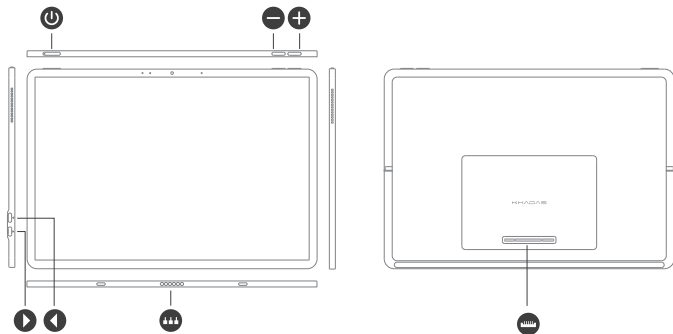

전원 버튼

볼륨 올리기 버튼

볼륨 낮추기 버튼

Keyboard 단자

Mind Link 단자

USB-C 입력 단자

USB-C 출력 단자

버튼 및 단자 기능



전원 켜기/끄기: 1.5초간 꾹 누릅니다.

화면 켜기/끄기: 짧게 누릅니다.



짧게 누르기: 볼륨 올리기

길게 누르기: 볼륨 계속 올리기



짧게 누르기: 볼륨 낮추기

길게 누르기: 볼륨 계속 낮추기



디스플레이 입력: 컴퓨터, 노트북 또는 스마트폰에 연결하여 비디오 및 오디오를 전송합니다.

전원 입력: xPlay 및 Mind에 전원을 공급합니다(Khadas 정품 어댑터 사용 권장).^[1]



디스플레이 출력: 확장 화면을 위해 외부 디스플레이에 연결할 수 있습니다.^[2]

전원 입력: xPlay 및 Mind에 전원을 공급합니다(Khadas 정품 어댑터 사용 권장).^[1]

데이터 전송: 외부 장치와 연결하여 데이터 전송(최대 5Gbps)을 지원합니다.

전원 공급: 외부 장치에 전원(최대 5V/3A)을 공급합니다.



정품 xPlay Keyboard와 연결



Mind 시리즈 컴퓨터를 연결하여 비디오 및 오디오를 전송하기 위한 전용 포트입니다. 또한 다음 기능도 지원합니다.

- 전원 동기화: xPlay 전원이 켜지면 Mind도 자동으로 켜집니다.
- 강제 종료: 전원 버튼을 10초 동안 길게 눌러 xPlay와 Mind를 모두 종료할 수 있습니다.
- 절전 모드 해제: Mind가 절전 모드일 때 xPlay 전원 버튼이나 키보드를 사용하여 깨울 수 있습니다.

[1] 표준 규격 어댑터(65W 이상, PD 프로토콜 지원)를 사용하면 xPlay와 연결된 Mind에 동시에 전원을 공급할 수 있습니다.

[2] xPlay를 통한 디스플레이 출력은 Mind Link를 통해 Mind가 연결된 경우에만 사용할 수 있습니다.

xPlay 사용법

xPlay는 다음과 같은 방법으로 기기에 연결할 수 있습니다.

Mind Link를 통해 Mind와 연결합니다.




지원 기기: Khadas Mind 시리즈 컴퓨터^[1]

Mind 하단의 Mind Link 포트를 xPlay 뒷면의 Mind Link 포트에 맞춰 부드럽게 딸깍 소리가 나도록 끼워 넣으세요. Mind가 xPlay 뒷면에 안전하게 연결됩니다.

xPlay 전원 버튼을 1.5초 동안 길게 누르세요. xPlay 전원이 켜지면 Mind에 자동으로 연결됩니다.

USB-C를 통해 타사 장치에 연결하세요

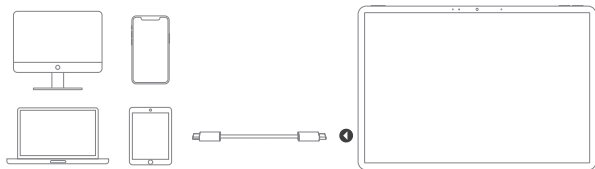

지원 기기: DP 디스플레이 출력을 지원하는 컴퓨터, 노트북, 스마트폰 및 기타 타사 기기


기기를 켜 후 데이터 케이블의 한쪽 끝을 xPlay USB-C 입력 포트에 연결하세요.^[2] 다른 한쪽 끝은 기기의 DP 디스플레이 출력 포트에 연결하세요.

xPlay 전원 버튼을 1.5초 동안 길게 누르세요. xPlay 전원이 켜지면 자동으로 연결됩니다.

[1] 현재 Mind 1, Mind 2 및 Mind 2s와 호환됩니다. Mind 2 AI Maker Kit와는 호환되지 않습니다.

[2] Thunderbolt 4 또는 USB4 데이터 케이블이 필요합니다.

xPlay 키보드와 함께 사용하세요 [1]

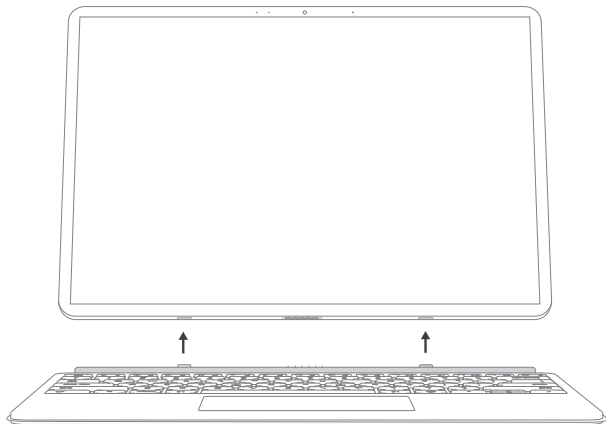

지원 기기: 정품 xPlay 키보드

Keyboard 단자를 xPlay 하단의 Keyboard 단자에 맞춥니다. 키보드의 가이드 핀을 슬롯에 맞춘 다음 딸깍 소리가 날 때까지 부드럽게 밀어 넣습니다. Keyboard가 단단히 고정되어 사용할 준비가 됩니다.

[1] xPlay 키보드는 일부 번들 상품에 포함되어 있거나 별도로 판매됩니다.

기술 사양

화면 크기	13형	전원 입력	최대 20V / 5A
해상도	2880 × 1920	카메라	2 MP
주사율	60 Hz	마이크	듀얼 마이크
색상 정확도	100% sRGB	스피커	듀얼 스피커 (2W × 2)
화면비	3:2	무게	900g 이하

List of Hazardous Substances

Hazardous Substances	Component Name	
	Device	PCBA
Pb	×	×
Hg	○	○
Cd	○	○
Cr6+	○	○
PBB	○	○
PBDE	○	○
DIBP	○	○
DEHP	○	○
BBP	○	○
DBP	○	○

This table has been prepared in accordance with SJ/T 11364.

○ : Indicates that the content of the hazardous substance in all homogeneous materials of the component is below the limit specified in EN62321.

×

: Indicates that the hazardous substance is present in at least one homogeneous material of the component at a level exceeding the limit specified in EN62321 because there is no proven alternative in the industry, that meets the environmental requirements of the EU RoHS directive. Depending on the model, the product may not include all the above accessories except the main machine, please refer to the actual product sales collocation.



This logo indicates that the product has a 10 year environmentally-friendly use period (EPUP) under normal conditions. For accessories, the environmentally-friendly use period (EPUP) on the label prevails.

Safety Guidelines

To ensure the best experience and avoid potential injury or damage, please read and follow these safety guidelines carefully.

- Use this product in environments between 10°C to 35°C. Store the product and accessories between -10°C to 45°C. Extreme temperatures may cause malfunction or damage.
- Do not use unapproved or incompatible power adapters, chargers, or batteries. Doing so may lead to fire, explosion, or other hazards.
- Always power the device using a charger or adapter with legitimate safety certification.
- If not in use for an extended period, disconnect the charger and unplug the power cord.
- The screen is fragile. Avoid impact, sharp objects, or drops from height to prevent cracks or breakage.
- Do not charge in damp environments (such as bathrooms or near showers/bathtubs). Avoid plugging or unplugging the charger with wet hands.
- The built-in battery is non-removable. Do not attempt to disassemble or replace it yourself, as this may damage the product or battery.
- Keep the device away from heat sources, direct sunlight, or open flames (such as heaters, ovens, stoves, water heaters, or fireplaces). Overheating may cause the battery to explode.
- Do not throw the battery into fire, dismantle, drop, crush, modify, or immerse it in liquid. Avoid puncturing it with sharp objects or allowing foreign materials inside.
- Dispose of this product (including the battery and accessories) in accordance with local regulations. Never treat the battery as household waste, as improper disposal may cause explosion or environmental harm.

