

KHADAS

Mind xPlay Keyboard


사용 설명서

xPlay Keyboard에 대해 자세히 알아보세요.

xPlay 키보드는 Mind xPlay 휴대용 디스플레이(이하 "키보드" 및 "xPlay"라 함) 전용으로 설계되었습니다. 이 키보드는 자석 접점을 통해 xPlay에 매끄럽게 연결되어 연결된 Mind 컴퓨터에 키보드 입력과 반응성이 뛰어난 터치패드를 모두 제공합니다[1]. 슬림하고 가벼우며 편안한 타이핑감을 제공하여 부드럽고 세련된 입력 경험을 선사합니다.

[1] 현재 Mind 1, Mind 2 및 Mind 2s와 호환됩니다. Mind 2 AI Maker Kit와는 호환되지 않습니다.

구성


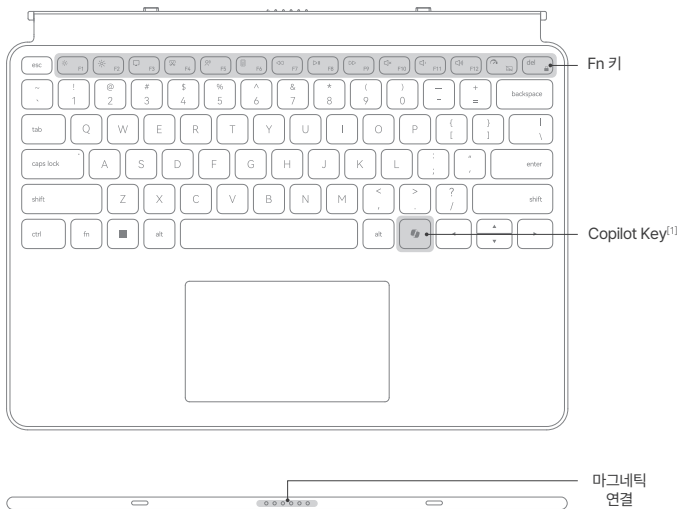


[1] 코파일럿 키: 코파일럿이 지원되는 지역에서는 이 키를 누르면 코파일럿 AI 어시스턴트가 실행됩니다.

Copilot을 사용할 수 없는 경우 해당 키는 기본적으로 Ctrl 키처럼 작동합니다. Mind 앱에서 해당 키의 기능을 사용자 지정할 수도 있습니다.

xPlay Keyboard 사용법

xPlay에 연결하기

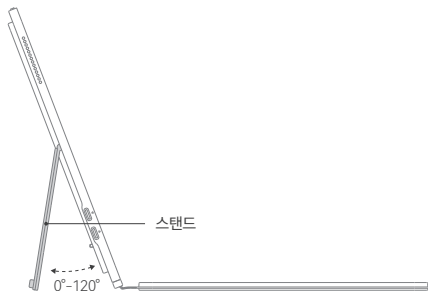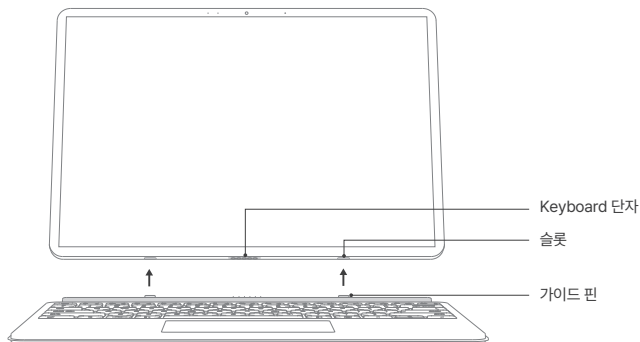

1. 키보드의 마그네틱 연결부를 xPlay 하단의 Keyboard 단자에 맞춰 정렬합니다.
2. 키보드의 가이드 핀을 xPlay의 슬롯에 맞춘 다음, 살짝 밀어 넣어 고정합니다.
3. 단단히 고정되면 xPlay의 내장 스탠드(0°~120°)를 조절하여 편안한 시야각을 설정합니다.

Fn 키 기능


기능 모드: 기능 키를 직접 누릅니다(예: F1 키를 눌러 화면 밝기를 낮춥니다).

표준 모드: Fn 키를 누른 상태에서 기능 키를 누릅니다(예: Fn + F1 키를 눌러 F1 키를 활성화합니다).

	밝기 낮추기	밝기 올리기	화면 미러링	스크린샷	음성 입력	계산기	이전 트랙
	 F1	 F2	 F3	 F4	 F5	 F6	 F7
Fn	F1	F2	F3	F4	F5	F6	F7
	재생 / 정지	다음 트랙	음소거	볼륨 낮추기	볼륨 올리기	사용자 지정 키	Delete
	 F8	 F9	 F10	 F11	 F12		
	F8	F9	F10	F11	F12	TouchPad 활성화/비활성화	잠금

*** 사용자 지정 키:** Mind 앱을 통해 사용자 지정 키를 개인 설정할 수 있습니다. Mind 컴퓨터에 연결된 경우 전원 모드를 전환하거나, 바로 가기 조합을 만들거나, 특정 앱 또는 파일을 열 수 있습니다.

Touchpad

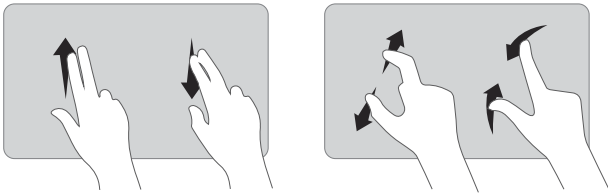

xPlay 키보드에는 탭핑과 누르기를 지원하는 멀티 제스처 터치패드가 포함되어 있어 부드러운 마우스 제어와 빠른 탐색 제스처를 사용할 수 있습니다.

List of Hazardous Substances

Hazardous Substances	Component Name	
	Device	PCBA
Pb	×	×
Hg	○	○
Cd	○	○
Cr6+	○	○
PBB	○	○
PBDE	○	○
DIBP	○	○
DEHP	○	○
BBP	○	○
DBP	○	○

This table has been prepared in accordance with SJ/T 11364.

○ : Indicates that the content of the hazardous substance in all homogeneous materials of the component is below the limit specified in EN62321.

× : Indicates that the hazardous substance is present in at least one homogeneous material of the component at a level exceeding the limit specified in EN62321 because there is no proven alternative in the industry, that meets the environmental requirements of the EU RoHS directive. Depending on the model, the product may not include all the above accessories except the main machine, please refer to the actual product sales collocation.



This logo indicates that the product has a 10 year environmentally-friendly use period (EPUP) under normal conditions. For accessories, the environmentally-friendly use period (EPUP) on the label prevails.

Precautions

1. Use this product in an environment between 10°C and 35°C, and store the product and its accessories in temperatures between -10°C and 45°C. Extremely high or low temperatures may cause malfunction or damage.
2. The exterior of this product is made of leather. Store it in a dry, room-temperature environment to prevent moisture damage.
3. When cleaning the keyboard surface, use a cloth lightly dampened with water or alcohol. Do not immerse the keyboard directly in liquid.
4. Dispose of this product and its accessories according to local regulations. Do not discard them as household waste.

